

# Eld)X◀

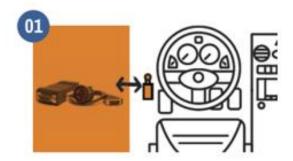

Turn on your phone or tablet's GPS and Bluetooth capabilities, Connect your hardware to your truck's ECM or OBDII Port.

If you are using the "GEAR" hardware, a flashing green and red light should appear on the front edge.

# **User Manual**

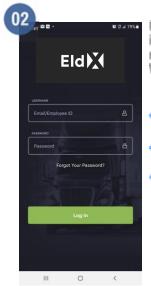

Using the login information you received in the Welcome Email

- Username or Email Here
- Password Here
- if this is your first time logging in, please accept Terms of Service and Application Permissions



Chose the Truck You Are Using Today You Can Search by Vehicle ID or VIN

Is this the correct truck?

If so Select Accept

If so Select Decline

Continue Without a Vehicle to access logs without selecting a vehicle.














For added safety to the driver, a password will be needed to leave this screen to ensure that an inspecting officer only sees what they need to see.


DOT Inspection
Instructions Found Here


To Send Logs Select Send Logs to DOT

Log History
 Shows PDF versions of daily logs

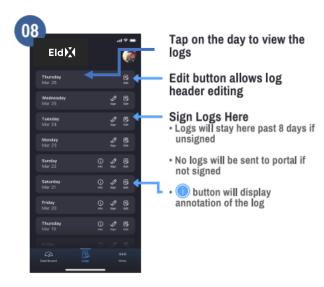




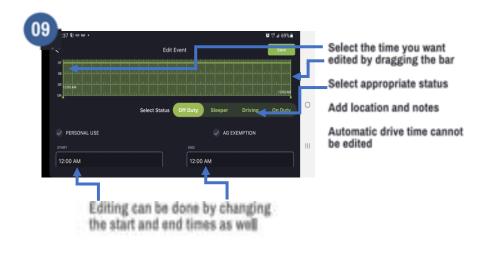

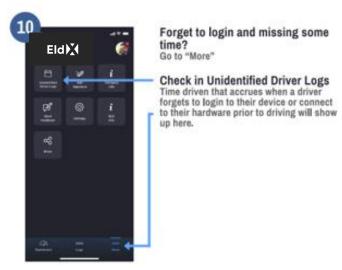



# Edit your signature for the certification of your daily logs and DVIR here. Send Feedback about ClutchELD here Share ClutchELD here

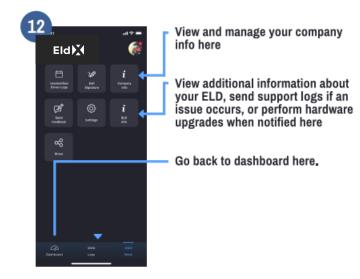



# **User Manual**

# 13

### How to report malfunctions and recordkeeping procedures

- Note the malfunction of the ELD and provide written notice of the malfunction to the motor carrier within 24 hours
- Reconstruct the record of duty status for the current 24-hour period and the previous 7 consecutive days, and record the records of duty status on graph-grid paper logs
- Continue to manually prepare a record of duty status until the ELD is serviced and brought back into compliance
- 4. Compliance Malfunction Codes:
- PWCM Power
- ESCM Engine Synchronization
- TCM Timing
- · PCM Positioning
- · DRCM Data Recording
- DTCM Data Transfer
- O Other















